



INSTALLATION INSTRUCTIONS FOR PART 99-7879

APPLICATIONS

2011 Honda CR-Z


99-7879

KIT FEATURES

- Recessed DIN mount radio provision with pocket
- ISO radio mount provision with pocket

KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) Pocket
- D) (11) #8X3/8" Phillips Truss Head screws
- E) (2) #6X3/8" Phillips Pan Head screws
- F) (4) White plastic clips • G) (1) Metal clip

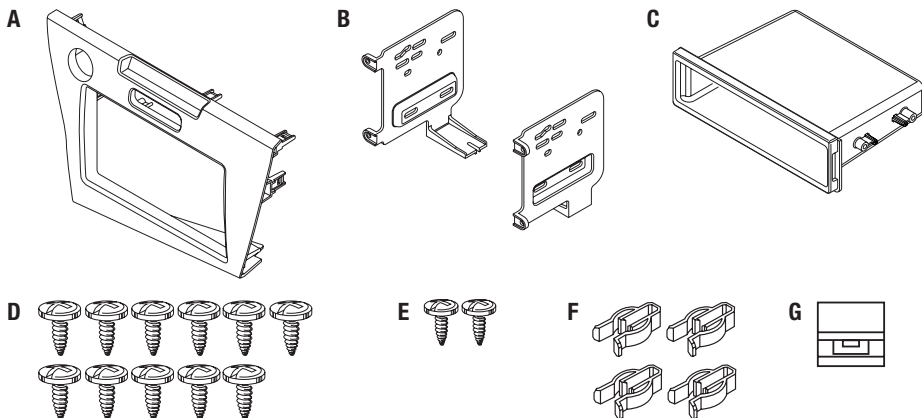

WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wire harness: 70-1729

Antenna adapter: 40-HD10

TOOLS REQUIRED

Panel Removal Tool (ATHKNGL) • Phillips Screwdriver



METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION



99-7879

Table of Contents

Dash Disassembly

– Honda CR-Z 2011	3
-------------------------	---

Kit Assembly

– ISO mount radio provision with pocket	4-5
---	-----

Caution

Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

**NOTE: Refer Also to the instructions included with the aftermarket radio.*



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.




**Metra recommends MECP
certified technicians**


Dash Disassembly

1. Unclip and remove the lower dash panel cover above the pocket and remove the 8mm/Phillips screw. (Figures A and B)
2. Unclip and remove the radio from the dash. (Tip: start at the top of the radio) (Figure C)
3. Unplug and remove the radio.


Continued to kit assembly

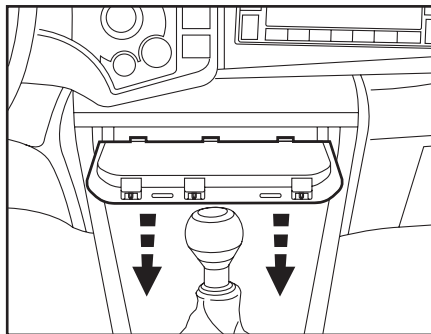

(Figure A)

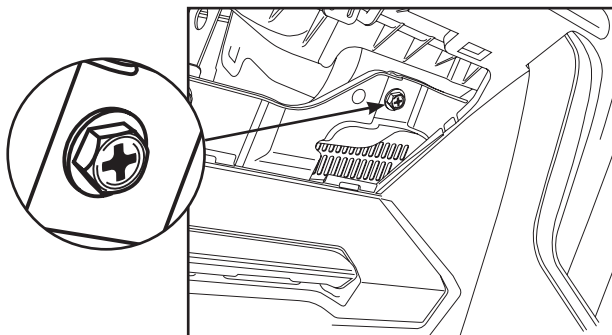


(Figure B)

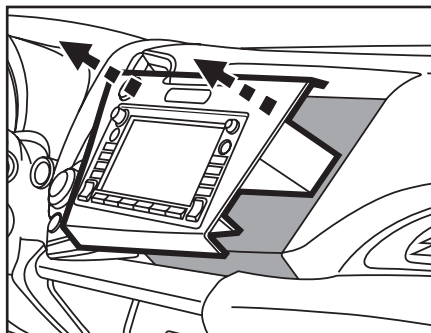

(Figure C)

Kit Assembly


1. Remove the center top clip off of the factory radio and install onto the 99-7879 install kit.
2. Follow the diagram to attach the necessary clips to the radio housing in the proper locations.
3. Remove 2 phillips screws holding the factory hazard switch for the factory panel and install into the 99-7879 re-using the factory hardware.
4. Remove 2 phillips screws holding the passenger airbag light from the factory panel and install into the 99-7879 using the supplied #6 screws.

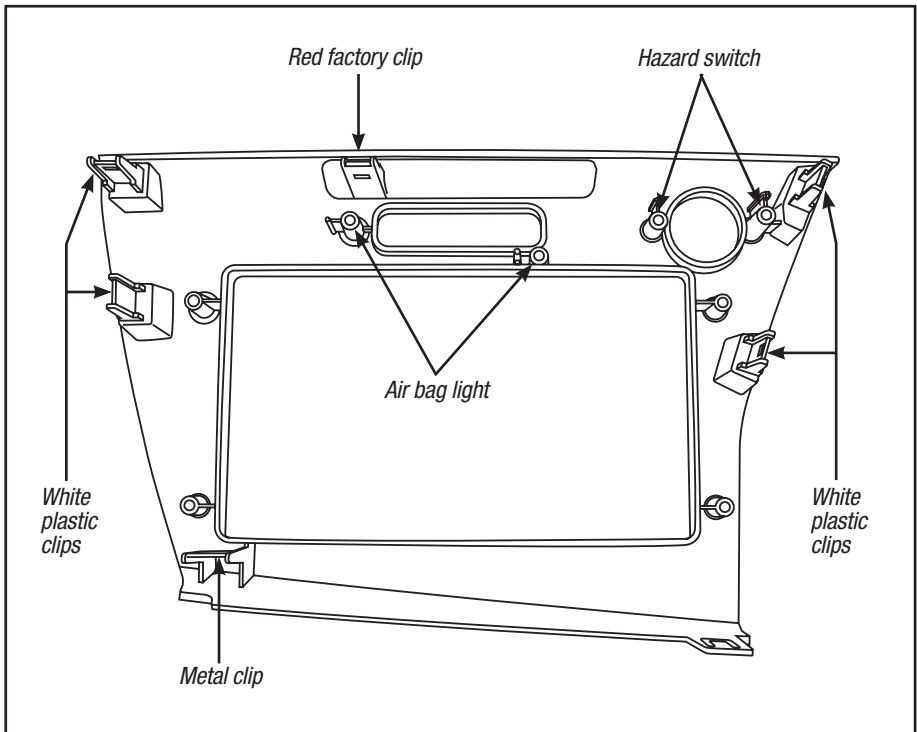


(Figure A)

ISO mount radio provision with pocket

1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Align the holes in the radio housing brackets with the holes in the ISO DIN Head Unit and secure the brackets to the head unit with the screws included with the unit. (Figure B)
3. Attach the pocket to the bracket/radio housing assembly with the four #8X3/8" Phillips screws provided. (Figure B)
4. Secure the radio housing brackets to the radio housing with four #8X3/8" Phillips screws provided. (Figure C)
5. Reassemble dash in reverse order of disassembly using the supplied #8 screw in place of the factory screw removed in step one, figure B of the dash disassembly.

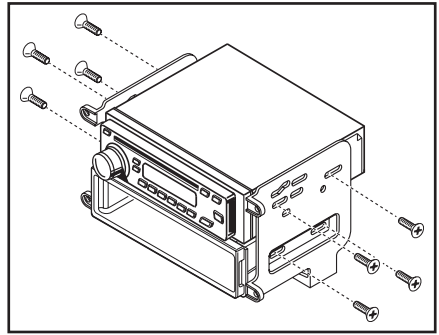

(Figure B)

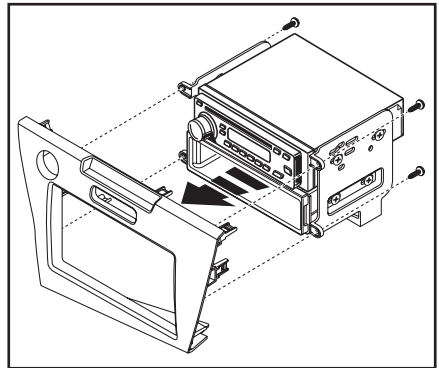

(Figure C)



Notes

This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



INSTALLATION INSTRUCTIONS FOR PART 99-7879

REV. 5/05/11



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

METRA. THE WORLD'S BEST KITS.™